



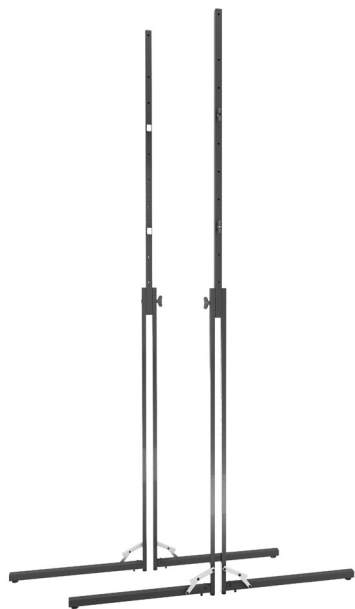


AGILE

INSTALLATION MANUAL


PACKAGE CONTENTS

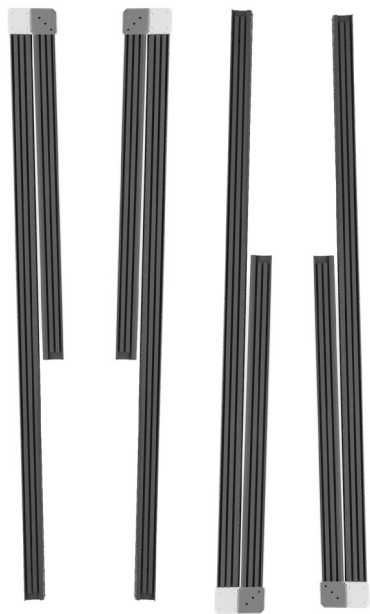


SCREEN ASSEMBLY

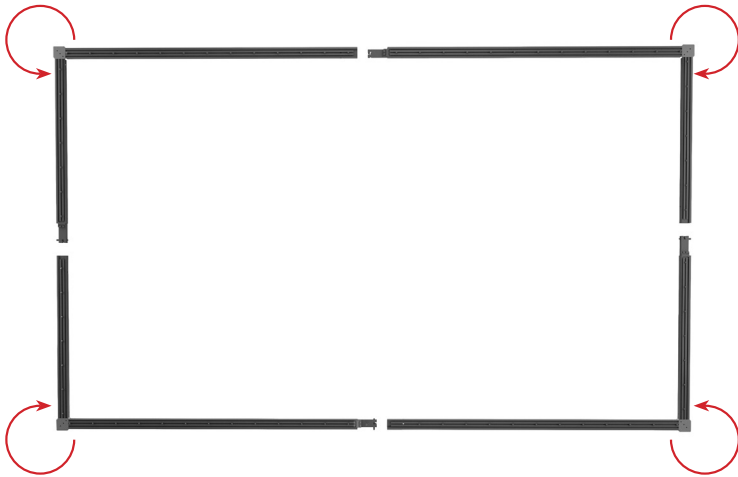

Open corners and align male/female joints.

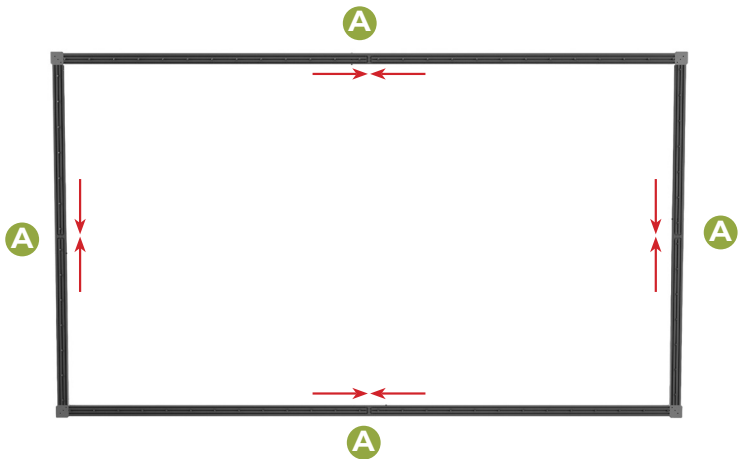

Insert joints into the profile to secure screen position.

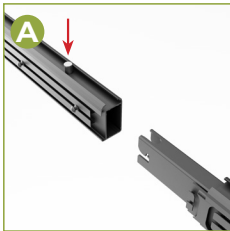


When inserting the male/female joint, press pin to lock.



If the screen is to be hung, turn to page 7, "EYEBOLT MOUNTING" section.

FABRIC INSTALLATION

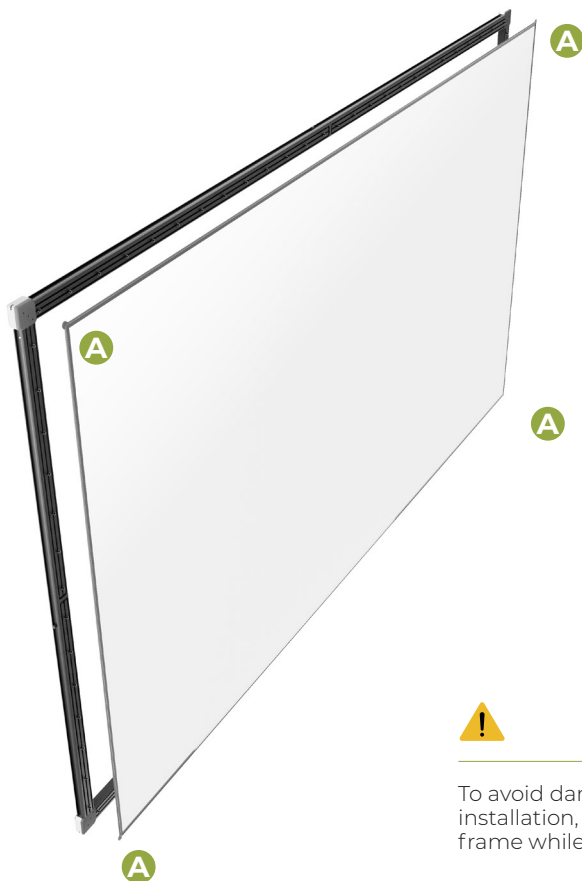

Attach the 4 fabric corners to each corner of the frame.


Each joint has multiple holes to adjust fabric tension based on temperature variations.



To avoid damaging the fabric during installation, use sawhorses to support the frame while working.



Insert fabric on each side using **1 slider for every 2 open holes** to ensure proper tensioning.

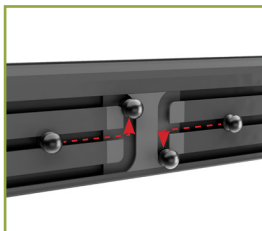

3-SLOT SYSTEM AND SLIDING CURSORS


The frame features three dedicated slots designed to accommodate the elastic variations of PVC caused by temperature changes.

The fabrics are designed for custom installation with the cursors positioned in the central slot.


Thanks to the repositionable cursors, they can easily be moved from one slot to another. This system allows you to select the most suitable slot and optimize fabric tension, ensuring a perfectly flat surface under any condition.

STAND MOUNTING

Open the two stands included in the kit.

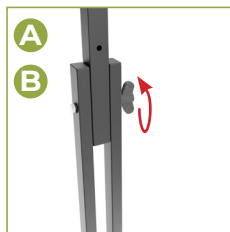


Loosen knob to open stand **(A)**.
Once positioned, tighten knob to lock stand in place **(B)**.

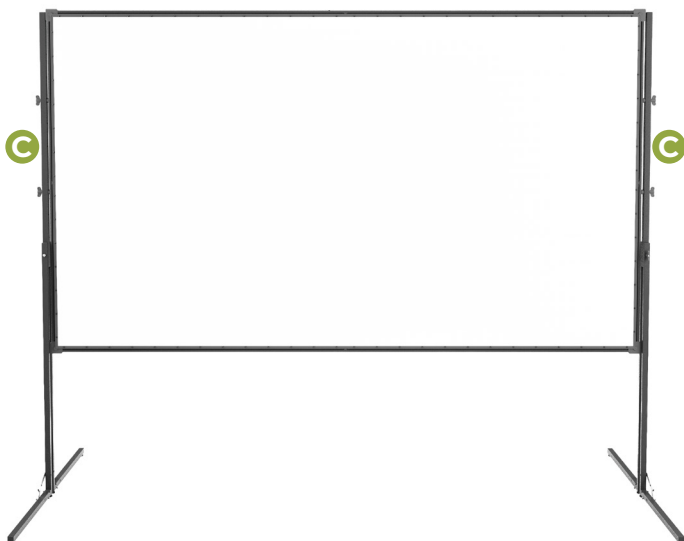

Attach stands to screen frame by tightening the two hand screws on each stand.

EXTENSIONS

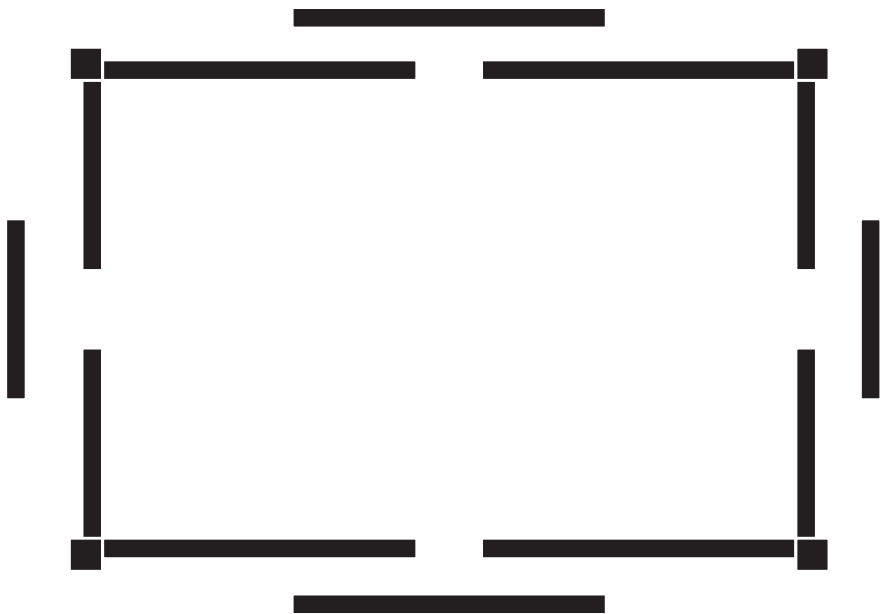

Depending on the screen format, extensions can be inserted into the frame to optimize the aspect ratio.


Inserting the extensions uses the same attachment system shown on page 3.

EYEBOLT MOUNTING


If the screen is suspended rather than floor-supported, install the included EYEBOLTS into the top slots.




The eyebolts can be installed with the frame assembled by inserting the threaded plate into the upper slot and then screwing in the eyebolt with the washer.

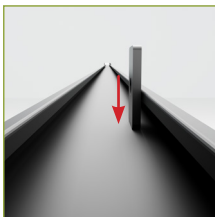

Insert threaded plate into slot.

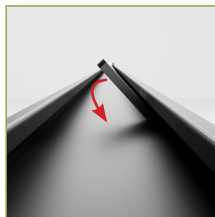

Rotate plate into position.

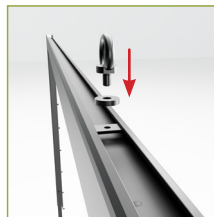

Place washer and eyebolt.



Screw in clockwise.

Screen Line SRL

 38060 Besenello (TN)
Via Nazionale, 1/n - 1/u

 +39 0464 830003

 info@screenline.it

 screenline.it



SCREENLINE

Screen designers and manufacturers of Italy